


CONNECTION DIAGRAMS

CONNECTION DIAGRAMS


for ZQ 120x, FQ 120x, CQ 3207, FQ 3x07, SQ 02x4



Phase to phase connection

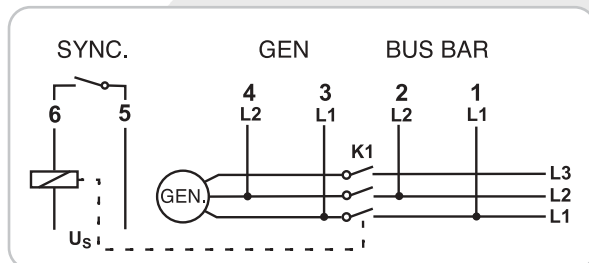


Phase to neutral connection

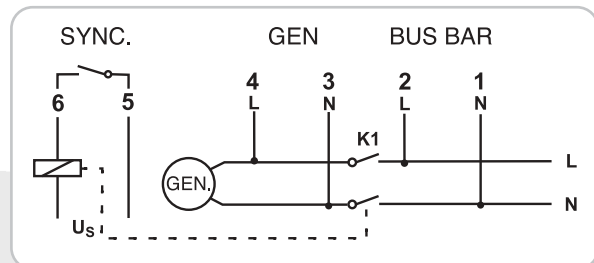


Connection terminal number	Connection designation	Usage of terminal
1	L1 ¹	System's voltage
2	L2 ¹	System's voltage
3	L1 ¹	Generator's voltage
4	L2 ¹	Generator's voltage
5	SYNC.	Relay output
6	SYNC.	Relay output
7	STATUS	Status output
8	STATUS	Status output

¹ In the case of phase to neutral connection, connection scheme on the back side of the synchroscope (upper pictures) is different, connection terminals' designations are "L" and "N".


Connection diagram for: ZQ 1207, ZQ 1208, FQ 1207, FQ 1208

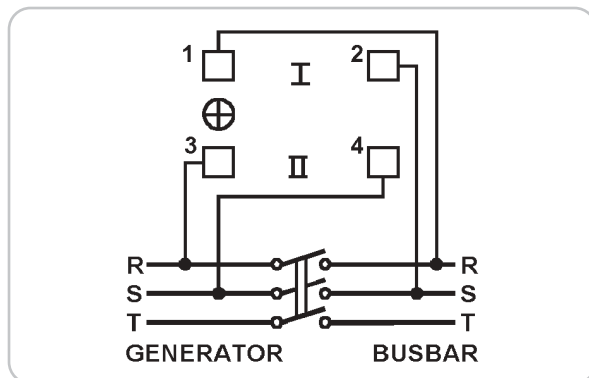

Connection diagram for: CQ 3207

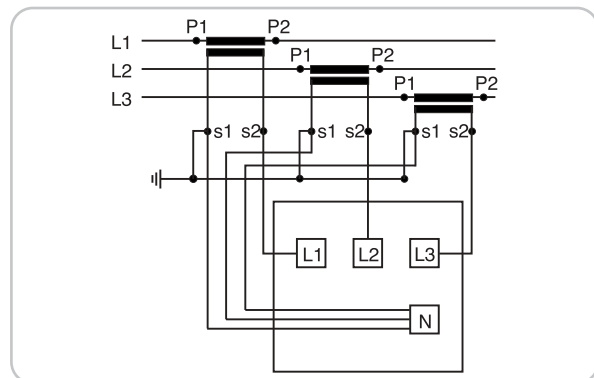

Connection diagram for: FQ 3207, FQ 3307

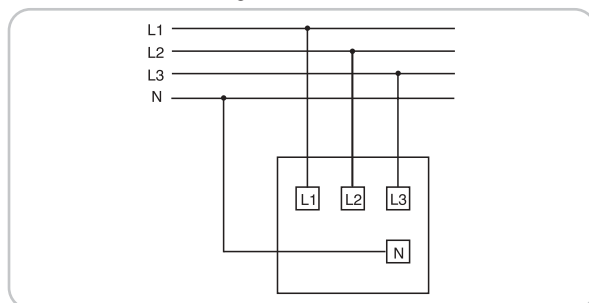

誥鑫企業有限公司

ARITH COMPANY LTD.

地 址：台北市復興北路427巷30號

電 話：(02)2717-5038

傳 真：(02)2717-5039

e-mail: taipei@arith.com.tw

網 址: http://www.arith.com.tw